

How to Change the Time in the Vacuum PLC HMI

Issue: When daylight saving time starts or when a site changes its opening or closing times, it might be necessary to change the time in the Vacuum PLC HMI.

This article will show you how to do the following, how to access the webpage, how to set the vacuum PLC system time using the GWC and Manually, and how to change the vacuum station hours of operation.

Accessing the Webpage

1. Open a Web browser on either the Mac Mini or Flight Deck iPad.
2. Log in to the Vacuum HMI Webpage.
 - a. Enter the Vacuum PLC's IP Address into the browser.
3. Select Config.




4. Select Config Vac Run Time.



To set the Vacuum PLC System Time.

1. From the GWC Network
 - a. Select "Set System Time from GWC"

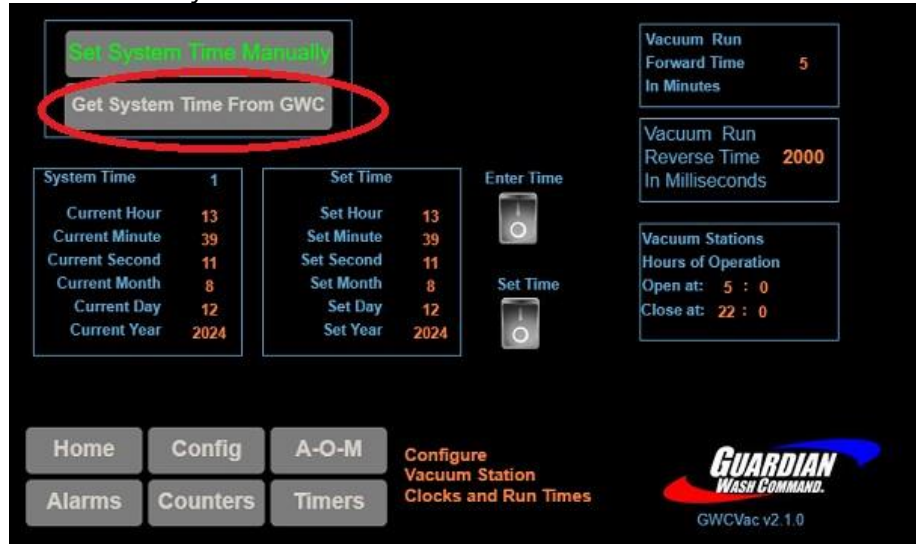


- b. "Set System Time from GWC" will change to Green.
- c. The system time is now set from the internet.

2. Manually

a. Select Enter Time



 b. Enter the correct time and date in 24-hour format in the Set time section.

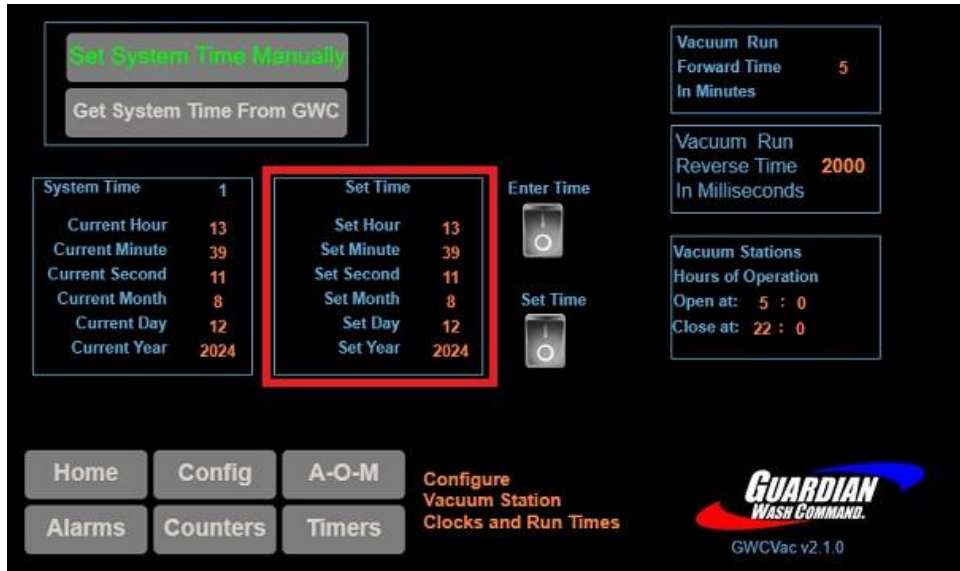

- c. Select Set Time to set the System Time and Date.




- d. The System time is now set from a local source.

How to change the Vacuum Station Hours of Operation.



1. Enter the desired time in a 24-hour format for either the Open at or Close at and press enter.
2. The Vacuum Stations' Open and Close times are now set.

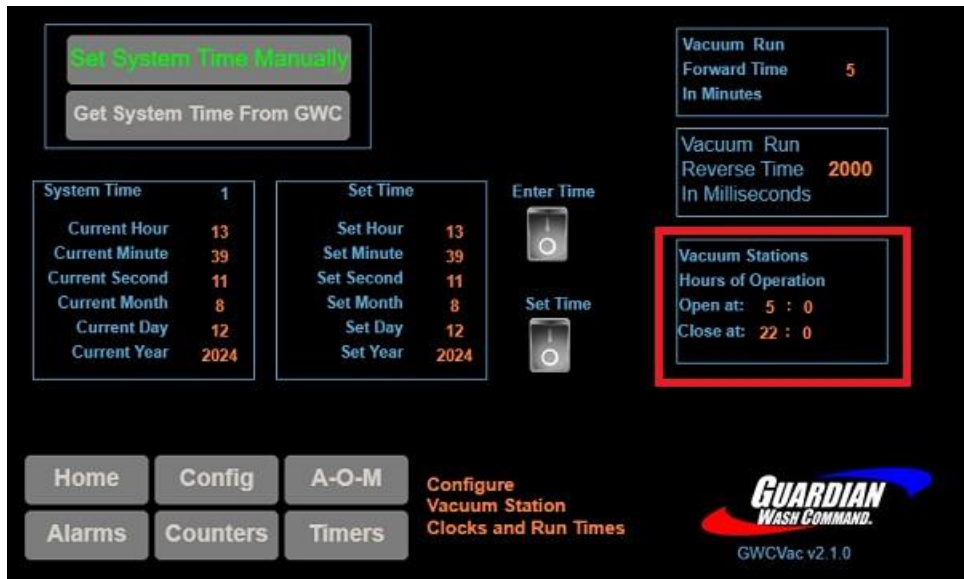

If the issue persists or if you need further assistance, please contact Equipment Support at 616-795-4892 or Support@TommyCarWash.com